/4K I

Instruction Leaflet

J.E.SUGDEN

A48 Amplifier

OPERATION

Control facilities are provided by means of four knobs - BASS, TREBLE, BALANCE, combined VOLUME - ON/OFF switch, and ten push buttons on the front panel.

The push buttons, which are of independent push on and push off operation offer facilities as follows:

INPUT SELECTION—this is controlled by the two extreme left hand buttons allowing three selections to be made—

DISC button in magnetic cartridge RADIO (DISC & AUX in) radio (stereo or mono)

AUX in auxiliary

The AUX facility has the same sensitivity as the RADIO input allowing the use of an additional tuner or other high level programme source.

TAPE

To play pre-recorded tape the TAPE button should be depressed. To record from programme sources, e.g. disc or radio, it is necessary to depress those input buttons normally required to select that source (as described above). The selected input is automatically connected to the tape output socket. If the output from the monitoring circuit on the tape recorder is connected to the tape input of the amplifier, A-B monitoring is possible by depressing the TAPE button.

FILTERS

The low frequency filter is selected by depressing; the LF Filter button and is useful for removing rumble, traffic and wind noise from the programme material. The turnover frequency is 70Hz and the rate of attenuation 18dB per octave. The high frequency filters are useful for removing distortion, hiss and surface noise from poor programme material and are selected by depressing one or both of the HF filter buttons. The rate of attenuation or slope is 6dB per octave and can be increased to 18dB per octave by depressing the steep button. The button marked 7KHz selects the 7KHz turnover frequency, the 10KHz button the 10KHz turnover frequency and both buttons together the 4KHz turnover frequency.

QUIET

The quiet button selects the quiet listening facility. Normal level should first be set on the volume control and the quiet button depressed. The mid frequency level will then be attenuated 16dB but the lower frequencies to a less extent to cater for the equal subjective loudness effect of the ear. This facility is useful for applications such as background music.

FUNCTION

The two end right hand buttons select as follows:—

STEREO (both buttons out)

LEFT in


RIGHT in

MONO (both buttons in)

Stereo.

left hand input to both amplifiers right hand input to both amplifiers left and right hand inputs mixed to

both amplifiers.

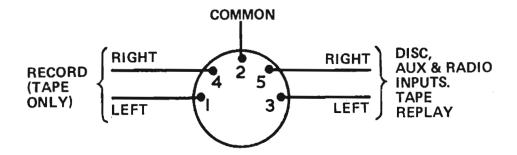

Four input sockets are provided with 5 pin DIN plugs for DISC, AUX., RADIO and TAPE, which should be wired according to DIN standards as shown, viewing from the inside of the plug, i.e. at the solder tag end.

Please note that on DISC inputs, pin 1 is connected internally in the amplifier to pin 5, and may be used as an alternative for R.H. input.

On later models pins 1 and 4 of the AUX socket are also connected via attenuators to pins 1 and 4 of the tape socket to provide a record output at DIN low level to suit the DIN record input requirements of the majority of CASSETTE RECORDERS.

Earthing of DISC input

It is important that the L.H. and R.H. screened leads from the pick-up cartridge, and the chassis lead (sometimes combined in the pick-up lead) should be connected ONLY to pin 2 of the DIN plug. Do NOT connect to the plug body, and care must be taken to insulate the screens from the plug body securing clip.

Adjustment of disc sensitivity

The sensitivity of the disc input has been carefully chosen to match most of the high quality cartridges currently available. There are a few cartridges which offer a much higher output, the use of which may necessitate a reduction of disc sensitivity - indicated by a need to operate the volume control at low settings, i.e. about 9.00 o'clock. Your dealer can do this for you. He should remove the amplifier from its cabinet, remove the control knobs and carefully remove the facia. The front panel securing screws in each corner are then removed when the front panel can be pulled forward to reveal the disc amplifier circuit board upon which will be seen two pairs of pins linked by a thin wire. If these wires are removed the resultant sensitivity will be 10mV instead of 2.5 or if they are replaced by 4.7K ohm resistors the sensitivity will be approximately 5mV. The overload capacity increases in the same proportion. On later models it is unnecessary to remove the front panel Access to the links can be made through the two holes in the side plate.

Power output:

40 watts RMS per channel both channels driven

at clipping level into 8 ohm loads.

Total harmonic distortion

less than 0.1%, mainly 2nd & 3rd harmonic, negligible proportion of high order harmonics and reducing in proportion with reducing power.

Frequency and power response

 \pm 1dB 30Hz to 20KHz.

Output to tape recorder

direct connection from radio and aux. inputs, 200mV from disc amplifier when correctly

loaded at average modulation.

Input sensitivity: (25W level 8 ohms)

Radio Tape 100mV into 200 Kohm flat response

Auxiliary

Magnetic Cartridge

2.5mV into 47K, equalized to R.I.A.A.

Overload capabilities

100mV on magnetic disc input; infinite on

radio, aux. and tape inputs.

Signal to noise ratio

704B

80dB on radio, aux, and tape inputs.

(30 phon weighting)

70dB on disc inputs.

Interchannel crosstalk

typically 40dB 20Hz - 10KHz, dependant

upon input load impedance.

Rumble filter

Built in on disc input, 12dB per octave

below 30Hz.

Control knobs:

Bass

± 14dB at 40Hz.

Treble

± 14dB at 10KHz

Volume

Logarithmic (Channel Balance ± 1dB

maintained to 40dB attenuation)

Balance

± 6dB for 180° rotation, either channel

eliminated at limits of rotation.

Push buttons to select: Inputs

DISC, RADIO, AUXILIARY, TAPE.

L.F. filter

18dB per octave below 70Hz.

H.F. filter

turnover 4, 7 or 10KHz, slope 6 or

18dB/octave.

Function

Mono, Stereo, Input Right, Input Left.

General: Power consumption

Turiction

140 watts maximum.

Size


15½" x 5" x 9" (400 x 130 x 230mm)


Weight

24 lbs (11 Kg)

The right is reserved to change the specification or design without notice.

J. E. Sugden & Co. Ltd., Carr Street, Cleckheaton, Yorkshire.

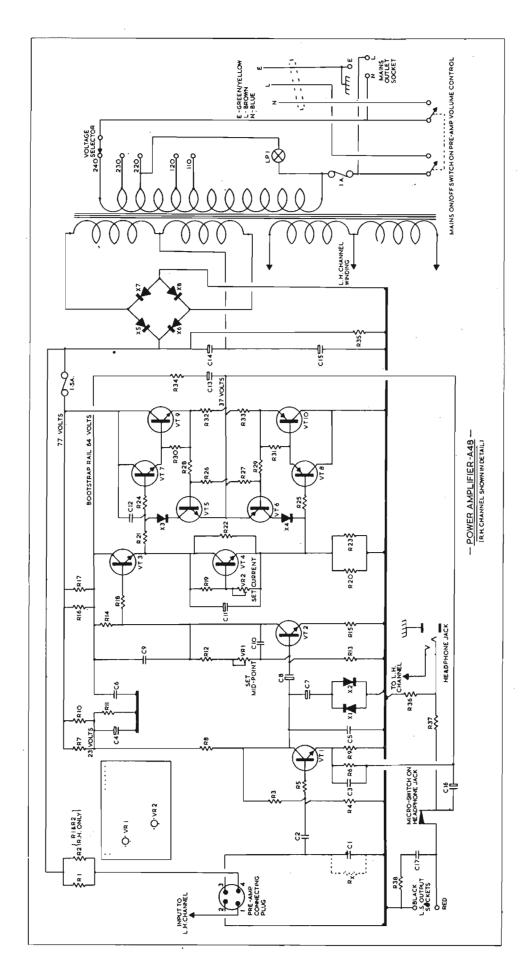

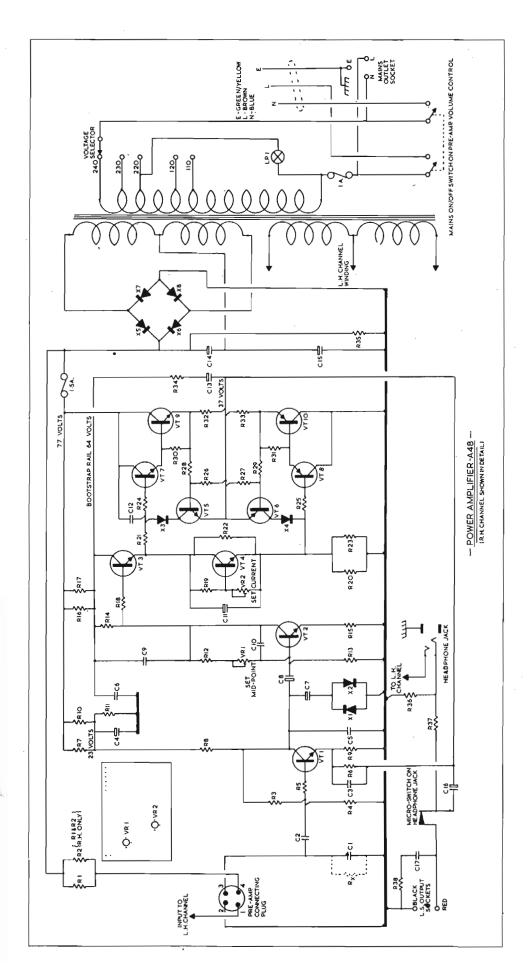

on
ust
Adi
(Y
nel o
chan
(one
balance
channell
* For

	fier Section	VR1 220K		0	C 5	ღ ე	C 4	C 2	9 0	C 7	ထ ပ	၈ ပ	C10	C11	C12	C13	C14	C15	C16 2500	C1/	;	- (<)	× :		× 4	××	۷ × ۲ ک	< >										* For channel bala	1453 A.M.
;	Power Amplifier Section	R 1 5K6	R 2 5K6	R 4 470K	R 5 6K8	R 6 1K5	R 7 8K2		R 9 47	R10 8K2	R11 2K2	R12 220K	R13 10K	R14 10K	R15 100	R16 1K2	R17 1K2	R18 1K2	R19 4K7	H20 3K9	H21 1K8	220	K23 3K9	R24 10	K25 10	R26 1K5	R2/ 1K5	R29 2K7	R30 100	R31 100	R32 0.33	R33 0.33	R34 10	R35 10K	R36 390	R38 1.0	Rx* 27K-220K		
•	ection	470p	.022	2200	1500	4700	3300	1500	2200	.01	0089	.01	.01	2.5	F.	.022	.022	.22	2.5	Tunch	02.7	710	0/17	0,1		.0.1 430.2	4/00	BC109S	BC109S	BC109S	BC109S	BC109S	BC109S	BZY88-C27					
	List Pre-Amplifier Section	R41 2K2 C16		18K	18K	1K5	6K8	47K	470K	88 84	<u>+</u>	4K7	1K2	4K7	220	33K	470K		VR1 250K Log C34	2007	250K	200V	201	200		200	4700	100	3600		47p	10	1000p	470p		C13 .01			
	Component I	R 1 2K7					7 22K	8 2K2		0 470K	1 M	2 75K	3 10K		5 15K	4K7	4K7	8M2		8IVIZ	100 k	- IVI - C	7000	777,	Z ;	 7 7 1	10K	10X	Σ	1K2	8M2	8M2	8M2	8M2	8M2		-	3K9	

VT 1 BC109C VT 2 ZTX341 VT 3 BD519 VT 4 BC548 VT 5 BC548 VT 6 BC558 VT 7 BD519 VT 8 BD520 VT 9 2N3055 Motorola VT10 MJ2955